



## LEAD CONTACT PLATE



MX3512

### GENERAL DESCRIPTION

The MX Industrial Lead Contact Plate is used to give good contact to the part and protect the surface of the head and tailstock. These plates need to be replaced when you start seeing holes and excessive wear marks on the surface.

*Note: Worn surfaces can lead to poor part contact, which could result in damage to the part.*

### Part Numbers

#### **MX3512: Lead Contact Plate**

The MX Industrial Lead Contact Plate is the replacement for original equipment. The soft lead plate provides excellent contact and fits all units except A-915 and H series units. Size: 6-3/4" x 6-5/8" x 1/4" thick.

### INSTRUCTIONS

Place contact pad on headstock or tailstock shelf between the contact plate and shelf block. Secure with single flathead screw through the hole on the top center of the contact plate. Inspect daily for wear and replace as necessary.