BLACK LIGHT ACCESSORIES




MODULAR BLACK LIGHT MOUNTING SYSTEMS

THREE MOUNTING SYSTEMS FOR THE MAGNAFLUX BLACK LIGHT

WET BENCH MOUNT

- Simple installation to any Magnaflux bench unit
- You can permanently mount the system on the bench
- Easily move your black light towards the part
- Part # 623365

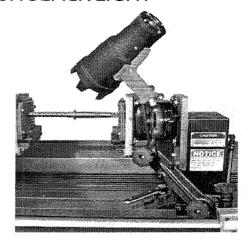

CELLING MOUNT

Permanently holds the black light at a given location for repeatable inspections

Extensions available (sold seperately) when the Black Light needs closer to the inspection area


With the provided hardware you can easily attach to the solid roof of your inspection booth or other flat surface

Part # 623367

FLAT SURFACE MOUNT

- Using the provided hardware, you can easily attach to any flat surface
- Allows the positioning of your Black Light to virtually any flat surface
- Adjust for any angle

Part # 623366









BLACK LIGHT ACCESSORIES


WET BENCH MOUNT INSTALLATION INSTRUCTIONS (P/N 623365)

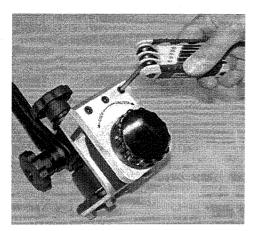


1. Remove screws from front plate of Clamp Assembly

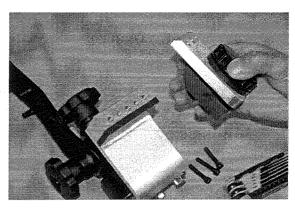

2. Remove front plate of Clamp Assembly

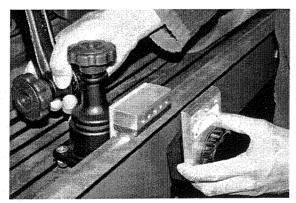


3. Place back of Clamp Assembly to inside of bench rail. Place front plate on outside.(see next instruction)

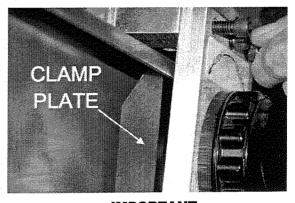


IMPORTANT ...

Be sure that you place the Clamp Plate under the lip. You may increase opening by turning knob to "UNLOCK"

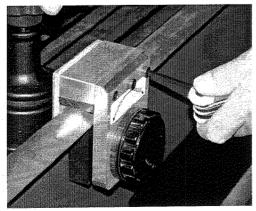


4. Insert and tighten screws into Clamp Assembly

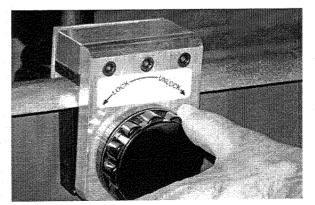


5. Turn locking knob to "LOCK" direction to permanently attach to bench

BLACK LIGHT ACCESSORIES


INSTRUCTIONS FOR ASSEMBLY OF MODULAR BLACK LIGHT SYSTEM HANDLE ADAPTOR

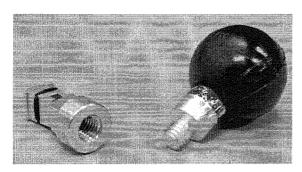


 Remove Handle Adaptor and Ball W/Stud from Plastic Bag

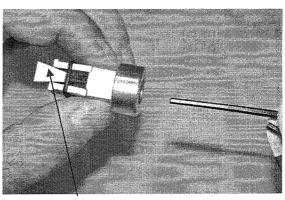


2. Position Wedge as shown above. This can be done by loosening the Allen screw using a 3/32 Allen Wrench (Not supplied)

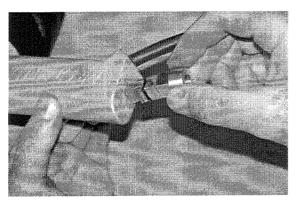


3. Carefully insert Handle Adaptor into opening located on the bottom of the Black Light handle

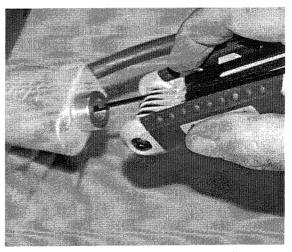

4. Tighten Allen screw until firmly in place

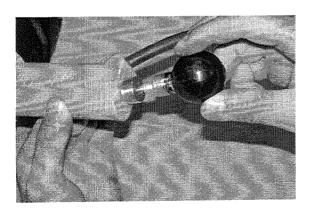

5. Screw Ball into the Adaptor

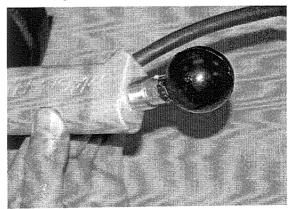

6. Black Light can now be attached to the Modular System